

CITROEN OBDII DTC

P1110	A/C control malfunction
p1113	Fuel pressure regulation
p1115	Upstream oxygen sensor auto-adaptive
p1116	Upstream oxygen sensor auto-adaptive
p1147	Variable distribution electrovalve(VTC)
P1148	Variable distribution electrovalve(VTC) Open circuit
P1149	Variable distribution electrovalve(VTC) Short circuit to earth or short circuit to positive
p1152	Throttle control
p1153	Motorised throttle position End stop programming
P1156	Electric throttle signal malfunction
P1157	Electric throttle signal malfunction
P1158	Electric throttle signal malfunction
P1159	Electric throttle signal malfunction
p1161	Motorised throttle position Coherence
p1162	Exhaust gas recycling Coherence
p1163	Exhaust gas recycling incorrect flow detected
p1181	Vacuum monitoring
p1183	Vacuum monitoring Short circuit to earth or open circuit
p1184	Vacuum monitoring Short circuit to +
P1186	Multifunction double relay control malfunction
P1187	Multifunction double relay control malfunction
P1188	Multifunction double relay control malfunction
p1206	Fuel pressure regulation electrovalve
p1207	Fuel pressure regulation electrovalve Short circuit to -
p1209	Fuel pressure regulation electrovalve Short circuit to +
p1210	Fuel pressure regulation electrovalve Open circuit
p1288	Fuel pressure regulation Efficiency
P1289	Injector 1# control malfunction
P1290	Injector 1# control malfunction
p1291	Fuel pressure regulation Efficiency / blocking
P1292	Injector 2# control malfunction
P1293	Injector 2# control malfunction
p1294	Fuel pressure regulation Efficiency drop
P1295	Injector 3# control malfunction
P1296	Injector 3# control malfunction
p1297	Fuel pressure regulation Low value
P1298	Injector 4# control malfunction
P1299	Injector 4# control malfunction
P1303	Knock adjustment malfunction
P1327	Ignition phase detect malfunction
P1329	Cylinder 1# knock adjust limiter malfunction
P1330	Cylinder 2# knock adjust limiter malfunction

P1331 Cylinder 3# knock adjust limiter malfunction
P1332 Cylinder 4# knock adjust limiter malfunction
P1336 Uncertain ignition fail malfunction
P1337 Cylinder 1# ignition fail malfunction
P1338 Cylinder 2# ignition fail malfunction
P1339 Cylinder 3# ignition fail malfunction
P1340 Cylinder 4# ignition fail malfunction
p1358 Ignition Coil 1 Short circuit to +
p1359 Ignition Coil 3 Control Short circuit to +
p1360 Ignition Coil 4 control Short circuit to +
p1361 Ignition Coil 2 control Short circuit to +
p1366 Ignition Coil 1 control Spark time
p1367 Ignition Coil 2 control Spark time
p1368 Ignition Coil 3 control Spark time
p1369 Ignition Coil 4 control Spark time
p1411 Cat. converter upstream temperature sensor
p1412 Cat. converter upstream temperature sensor Coherence
p1413 Cat. converter upstream temperature sensor Short circuit to earth
p1414 Cat. converter upstream temperature sensor Short circuit to + or open circuit
p1416 Cat. converter downstream temperature sensor
p1417 Cat. converter downstream temperature sensor Coherence
p1418 Cat. converter downstream temperature sensor Short circuit to earth
p1419 Cat. converter downstream temperature sensor Short circuit to + or open circuit
p1456 Exhaust gas recycling incorrect flow detected
p1457 DeNox cat. converter missing
p1512 Engine immobiliser function
p1517 Engine immobiliser function
p1536 Remote fault Esp Ecu reception value received incorrect
p1601 Ignition on Ecu supply control
p1612 Engine immobiliser function
p1621 Inside ECU(CAN)
P1622 Inside ECU(CAN)
P1627 Inside ECU(CAN)
p1631 Inside ECU(CAN)
p1633 Ignition on ECU supply control Short circuit to earth or open circuit
p1634 Ignition on ECU supply control Short circuit to +
p1635 Ignition relay control Short circuit to earth or open circuit
p1636 Supply relay control Short circuit to +
p1637 Ignition on ECU supply control Short circuit to earth or open circuit
p1639 Supply relay control Short circuit to earth or open circuit
p1640 Supply relay control Short circuit to +
P5000 Communication malfunction between ECM and other computers (CAN)